

PROFILE SHELF INSTALLATION INSTRUCTIONS

Tools required & suggested

#1 Phillips screwdriver • Tape measure • Level

Parts included

• Wall brackets • Tempered glass shelf • 2 #1 Phillips screws • 2 zip-it wall anchors • Allen Key

Mark location of mounting holes on wall

NOTES:


- Brackets should be located approx. 4" on center from ends of shelf




Install wall anchors

NOTES:


- If on tile or other hard surface use proper anchor for #6 screw.
- If on **wall stud** ***BEST INSTALLATION*** don't use anchor, pre drill 3/32" hole for screw.
- Wall anchors must be properly installed. (not loose or stripped) & on good quality wall board.

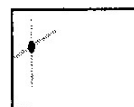

make a hole

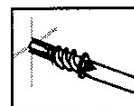

Push in

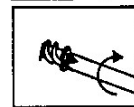

Screw in slowly until flush with wall



Mounting tape

NOTES:



- Peel after shelf is installed!



Screw in

NOTES:

- Use #1 Phillips screw driver.

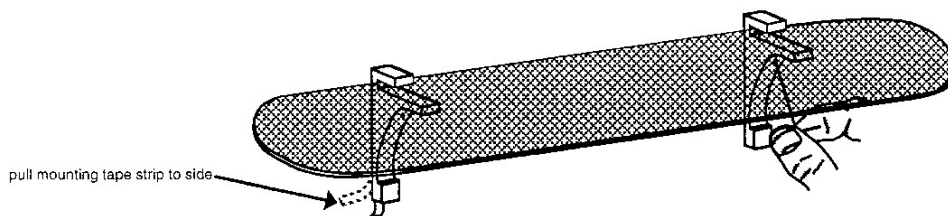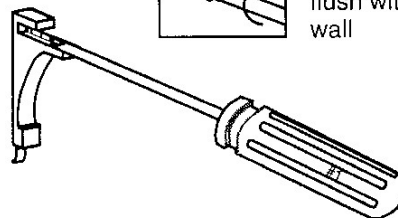

Install Glass

NOTES:

- Glass goes smooth side up.
- With glass centered on brackets and all the way back into slots.
- Tighten set screws with allen key provided.

Peel mounting tape

NOTES:

- Pull slightly out on bottom of bracket & peel.
- Push bottom of bracket to wall.

PROFILE SHELF INSTALLATION INSTRUCTIONS

Tools required & suggested

#1 Phillips screwdriver • Tape measure • Level



Parts included

• Wall brackets • Tempered glass shelf • 2 #1 Phillips screws • 2 zip-it wall anchors • Allen Key

Mark location of mounting holes on wall

NOTES:

- Brackets should be located approx. 6" on center from ends of shelf
- 10" x 24" shelf - 12" apart
- 10" x 36" shelf 24" apart (as close as 16" O.C. when mounting to wall studs)

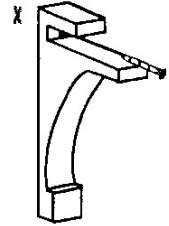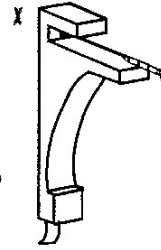


Install wall anchors

NOTES:


- If on tile or other hard surface use proper anchor for #6 screw.
- If on **wall stud** ***BEST INSTALLATION*** don't use anchor, pre drill 3/32" hole for screw.
- Wall anchors must be properly installed. (not loose or stripped) & on good quality wall board.




make a hole

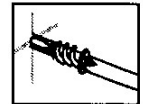

Push in

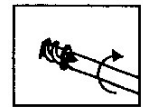

Screw in slowly until flush with wall

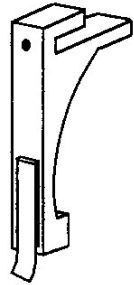

Mounting tape

NOTES:

- Peel after shelf is installed!



Screw in

NOTES:

- Use #1 Phillips screw driver.




pull mounting tape strip to side

Install Glass

NOTES:

- Glass goes smooth side up.
- With glass centered on brackets and all the way back into slots.
- Tighten set screws with allen key provided.

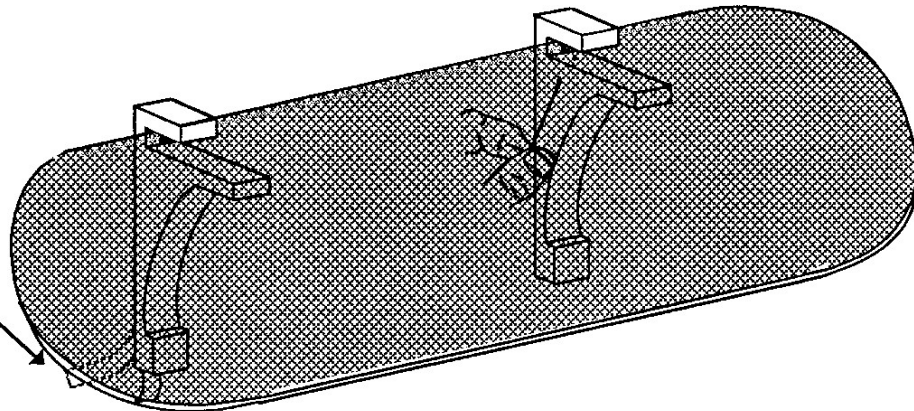

Peel mounting tape

NOTES:

- Pull slightly out on bottom of bracket & peel.
- Push bottom of bracket to wall.