

Corner Shelf Clip Instructions

Tool required:

- Standard length #2 Phillips screwdriver.

Tools suggested:

- Tape measure.
- Drill with 1/8" drill bit.

Parts included:


- Corner Clip.
- #10 x 2" pan head phillips screw.
- 10"x10" or 12"x12" x 3/8" thick glass shelf.

- Mark location of clip.


- Predrill 1/8" hole straight into corner.

(corners almost always have studs-if not use 3/16"x 3" toggle bolt)


- Hold Clip in place and screw in until tight.

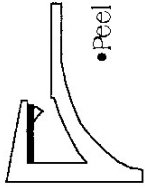

- Peel mounting tape.

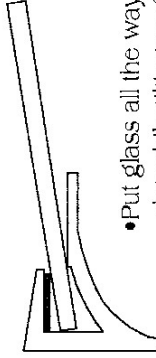

- Put glass all the way back into slot while tilting up front - push down in place so mounting tape sticks to top of glass.

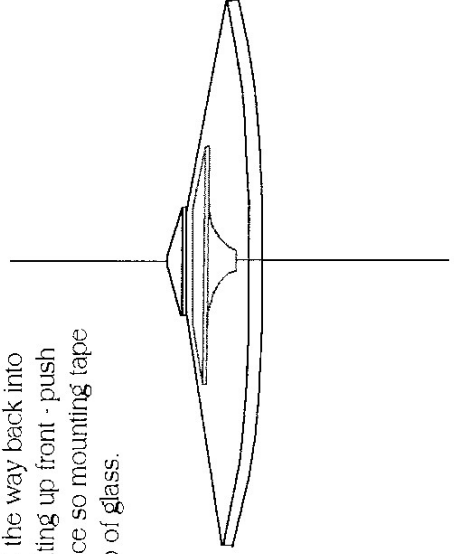

Corner Shelf Clip Instructions

Tool required:

- Standard length #2 Phillips screwdriver.

Tools suggested:

- Tape measure.
- Drill with 1/8" drill bit.

Parts included:


- Corner Clip.
- #10 x 2" pan head phillips screw.
- 10"x10" or 12"x12" x 3/8" thick glass shelf.

- Mark location of clip.


- Predrill 1/8" hole straight into corner.

(corners almost always have studs-if not use 3/16"x 3" toggle bolt)

- Hold Clip in place and screw in until tight.

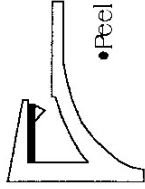

- Peel mounting tape.

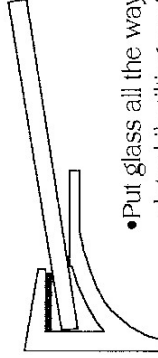

- Put glass all the way back into slot while tilting up front - push down in place so mounting tape sticks to top of glass.

